
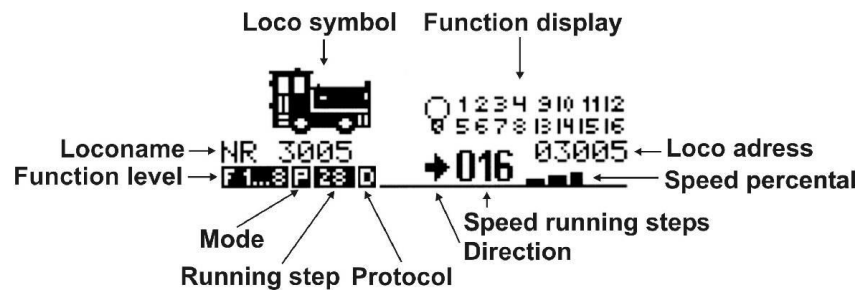


The special functions, like smoke generator, lights, sound functions etc, are operated with the function keys 1...8.  
 The F-key toggles between function level 1 to 8 and function level 9 to 16. The functions F1 to F16 are marked on the function keys. (See graphic below)

**Points:** Pressing the M1 key twice gives you access to the turnout command mode. Enter the address of your point with your keyboard of the Navigator and operate this switch with the arrow keys of the secondary function to the left or to the right. <| O |>  
 M3 takes you back to the main menu

### Navigator ID Wired / RC mode

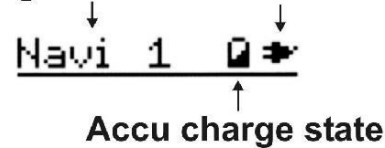

**Selecting the Loco Address** After pressing the locomotive selection key M2 the DiMAX Navigator displays the locomotive selection window. Enter the loco address via the keypad, for example, loco address 0021 After confirming the address by pressing M3, the loco is ready for operation and the DiMAX Navigator automatically returns to the driving mode screen.

