


Photo #16 – Smoke Box Door and Switches

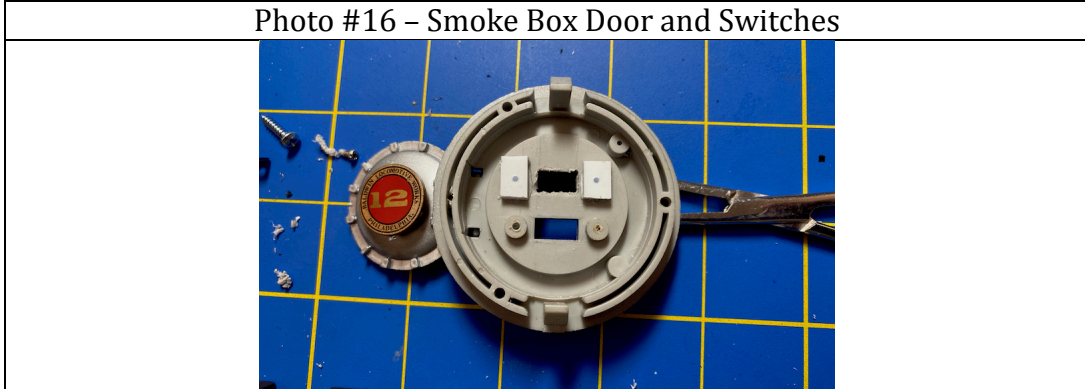

21. Remove the smoke unit from the standard “Big Hauler” Locomotive shell (refer to photo #17), and mount the speaker in its place, using $\frac{1}{4}$ ” standoffs and two #4 x $\frac{1}{2}$ ” pan head sheet metal screws. Solder the speaker wires to the corresponding sound wires for the revolution (refer to photo #18). Remember to use heat shrink tubing to protect the solder connections.

Photo #17 – The Smoke Unit



Photo #18 – Addition of the Speaker

